SCHLAGE®

FE575/FE595 Door Preparation Instructions
For Door With No Holes

Tools Needed

1 Measure Door Width

If the door is thinner than 1⅜" or thicker than 1¾", then the lock will not fit properly on the door.

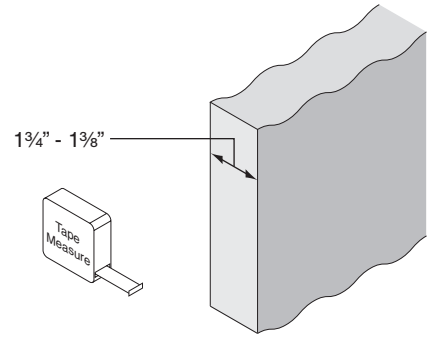

2 Mark Lock Centerline on Door Face and Door Edge

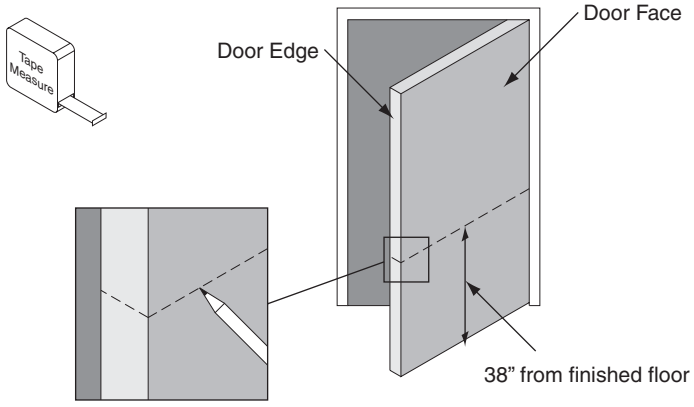

3 Mark and Drill Hole in Door Face with 2⅛" Hole Saw

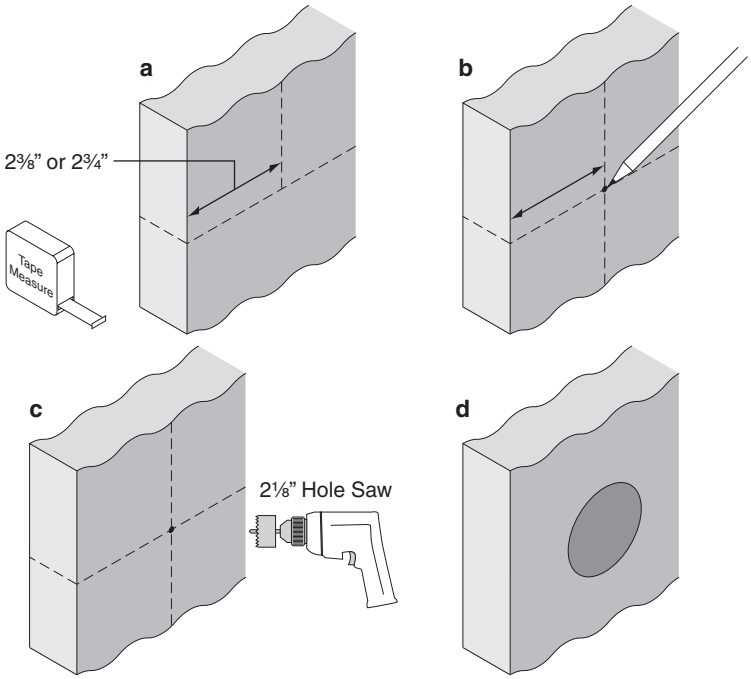

4 Mark and Drill Hole in Door Edge

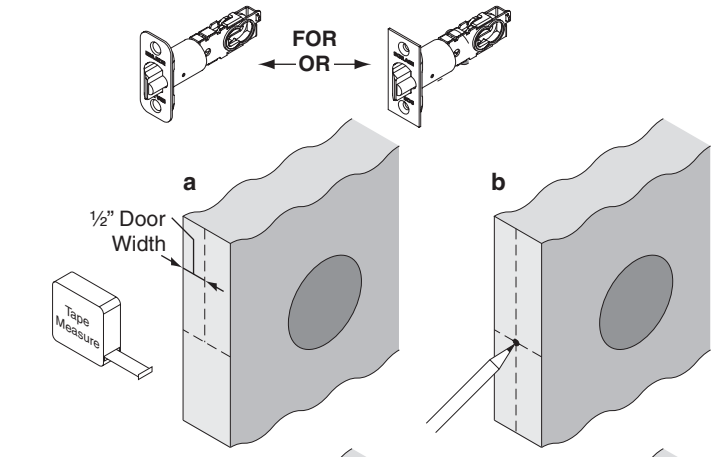

OR

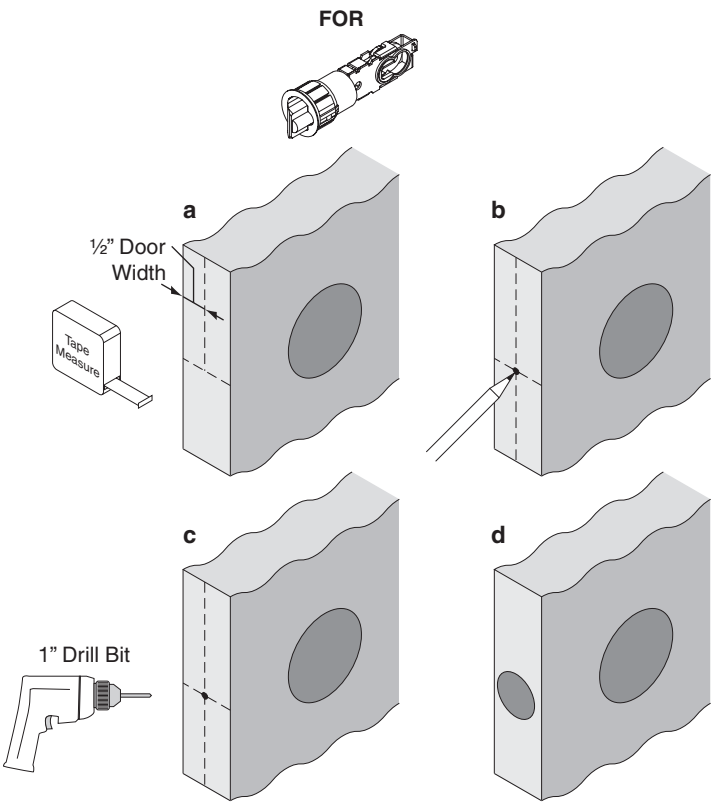

5 If Necessary, Mortise for Latch

a. Insert latch into door edge hole.
b. Use pencil to trace latch and mark holes.
c. Remove latch and drill two ⅛" pilot holes.
d. Use chisel to create latch mortise.

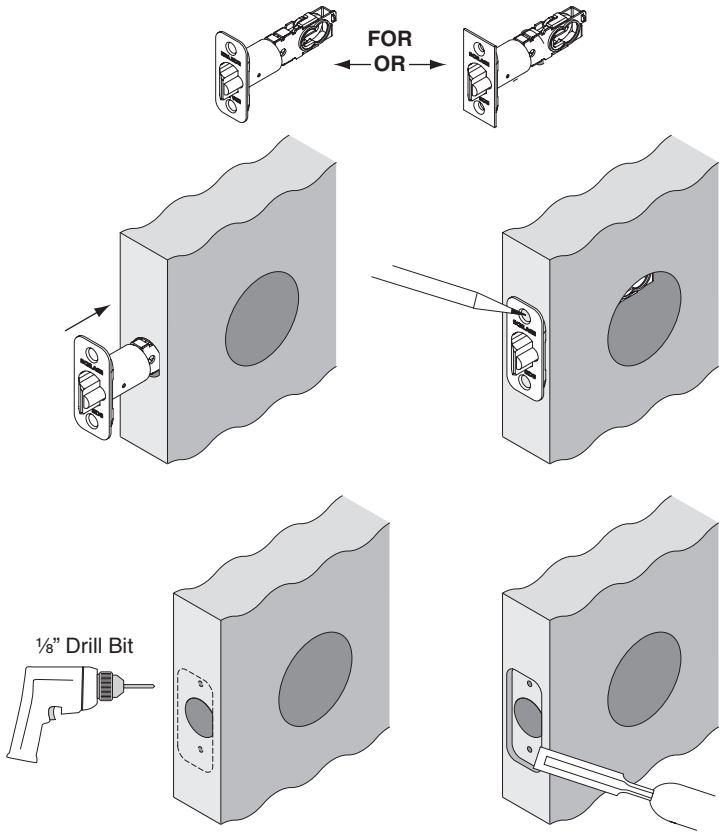

6 Measure Door Jamb for Strike

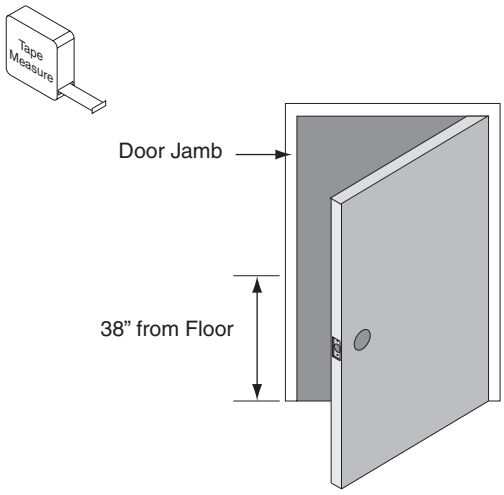

7 Mark and Drills Holes for Strike

a. Measure 38" from finished floor and mark on door jamb.
b. Mark center for strike hole exactly opposite latch hole.
c. Drill 1" hole, ½" deep.
d. Line up strike with hole in door jamb.
e. Use pencil to trace strike and mark holes.
f. Drill two ⅛" pilot holes and use chisel to create strike mortise.

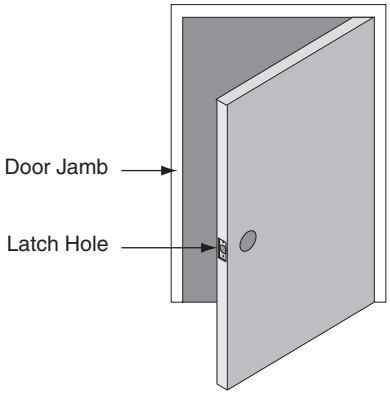

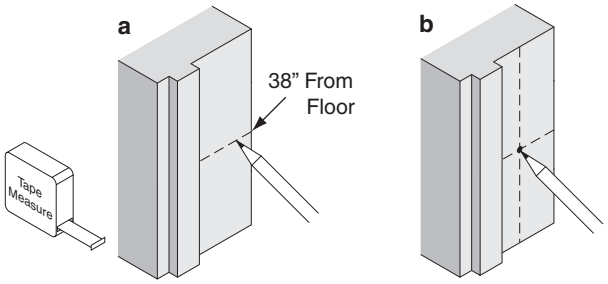

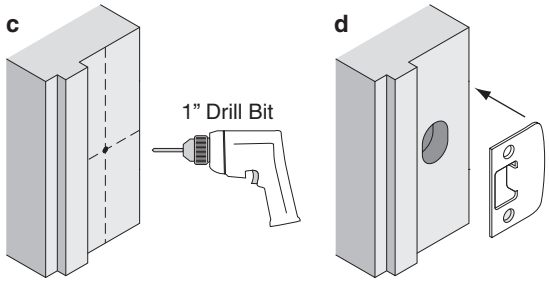

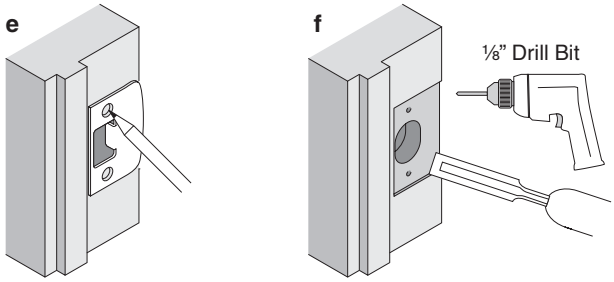

IR Security & Safety
©2005 Ingersoll-Rand Company
Printed in U.S.A
Rev. 11/05